


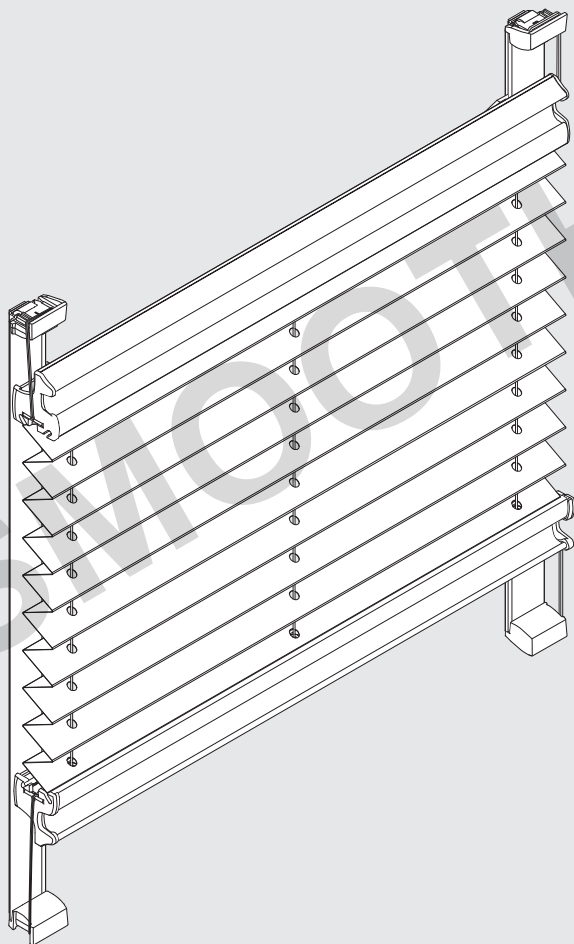
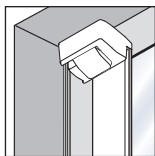
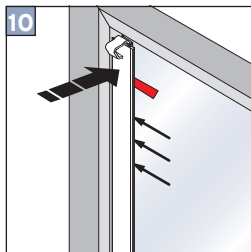
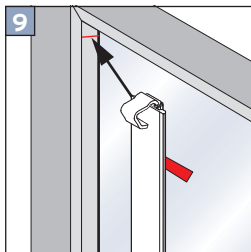
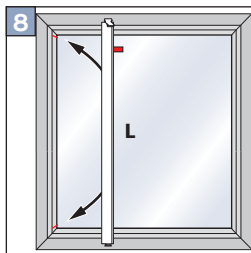
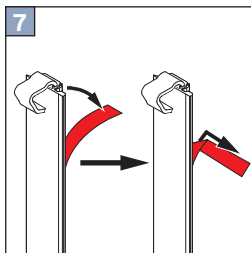
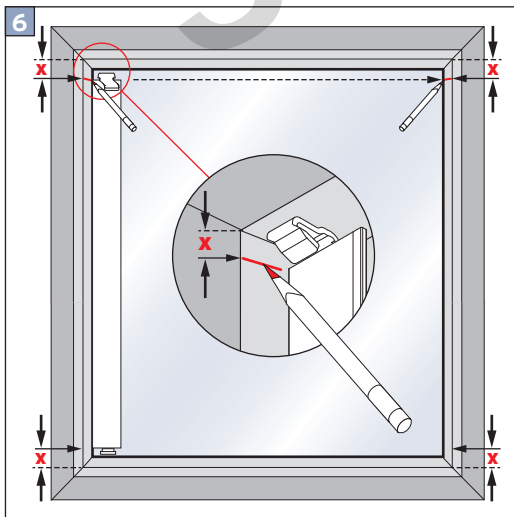
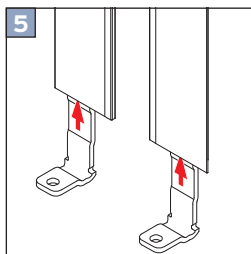
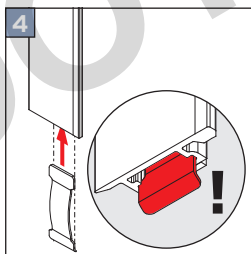
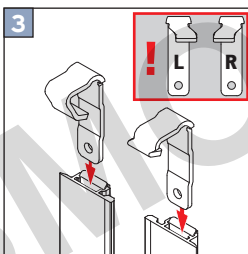



















SMOOTH FIT BLINDS - Fitting & Removal Instructions








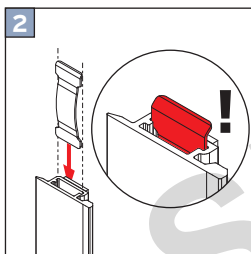


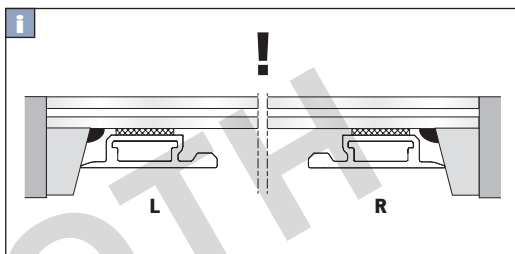

Adhesive mounting

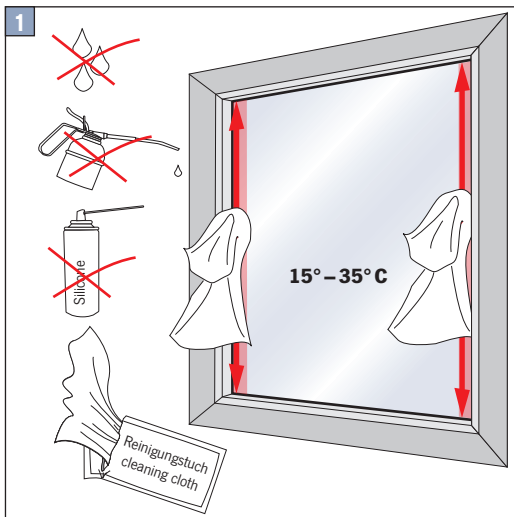

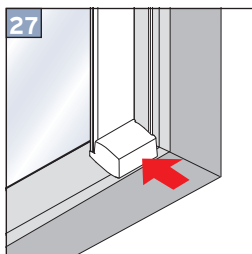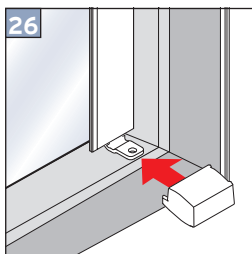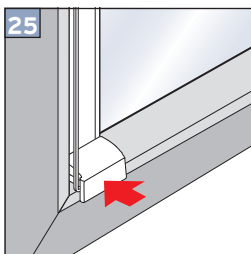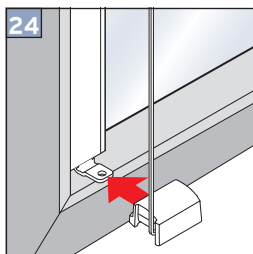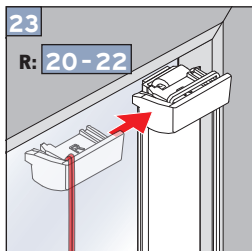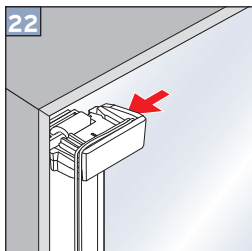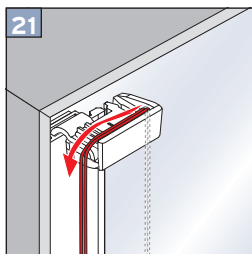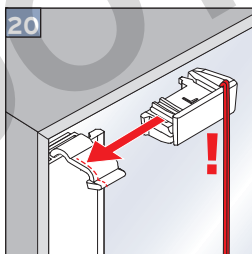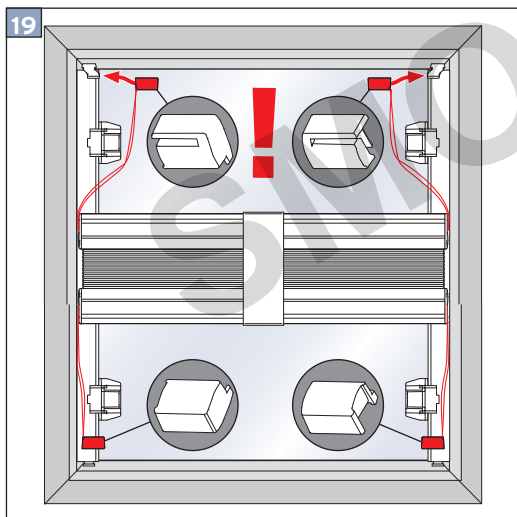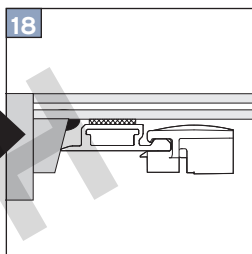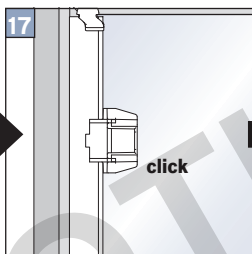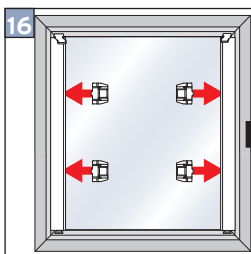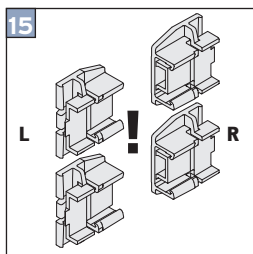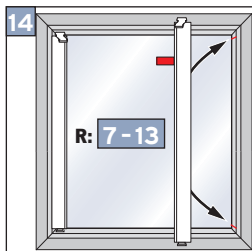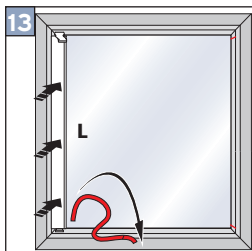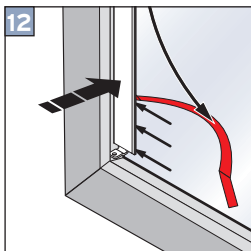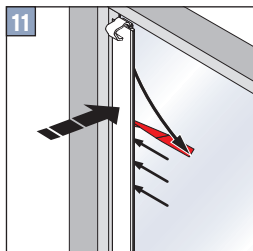

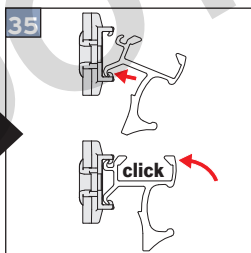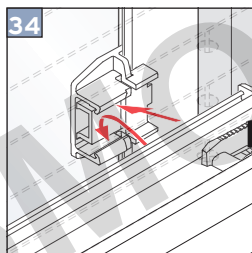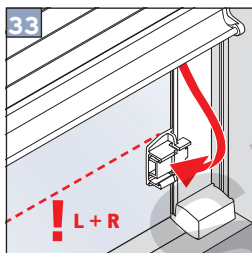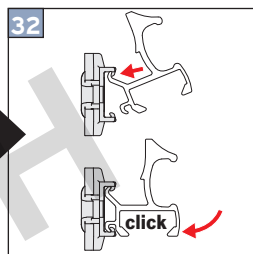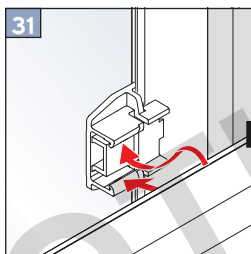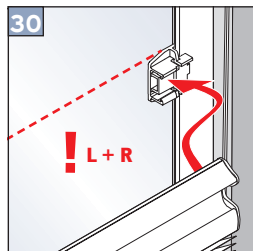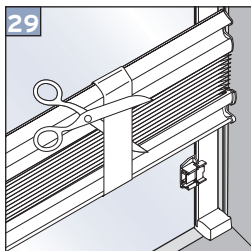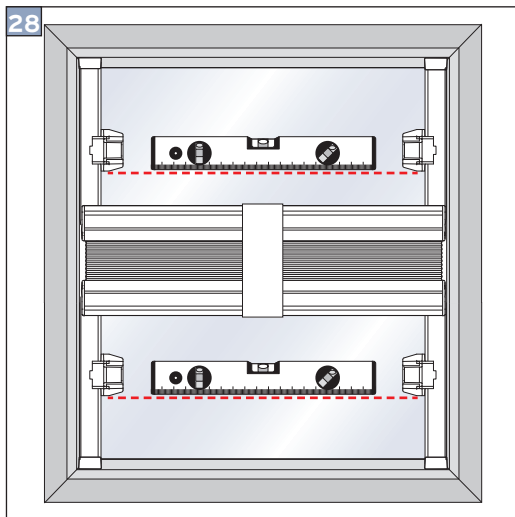

Disassembly • Smooth System Removal

